
















WALK-IN GREENHOUSE


1.95M X 1.43M X 0.73M

CTGAGH211SA

COMPONENTS

Parts	Picture	Qty.
1	 (30 in.)	x3
3	 (15 in.)	x22
4	 (11 in.)	x14
5	 (39.5 in.)	x4
8	 (26.5 in.)	x15
A		x4
D		x6
E		x20
J		x2
Y		x1
Z		x4
Anchors		x4
Ropes		x4

OVERVIEW

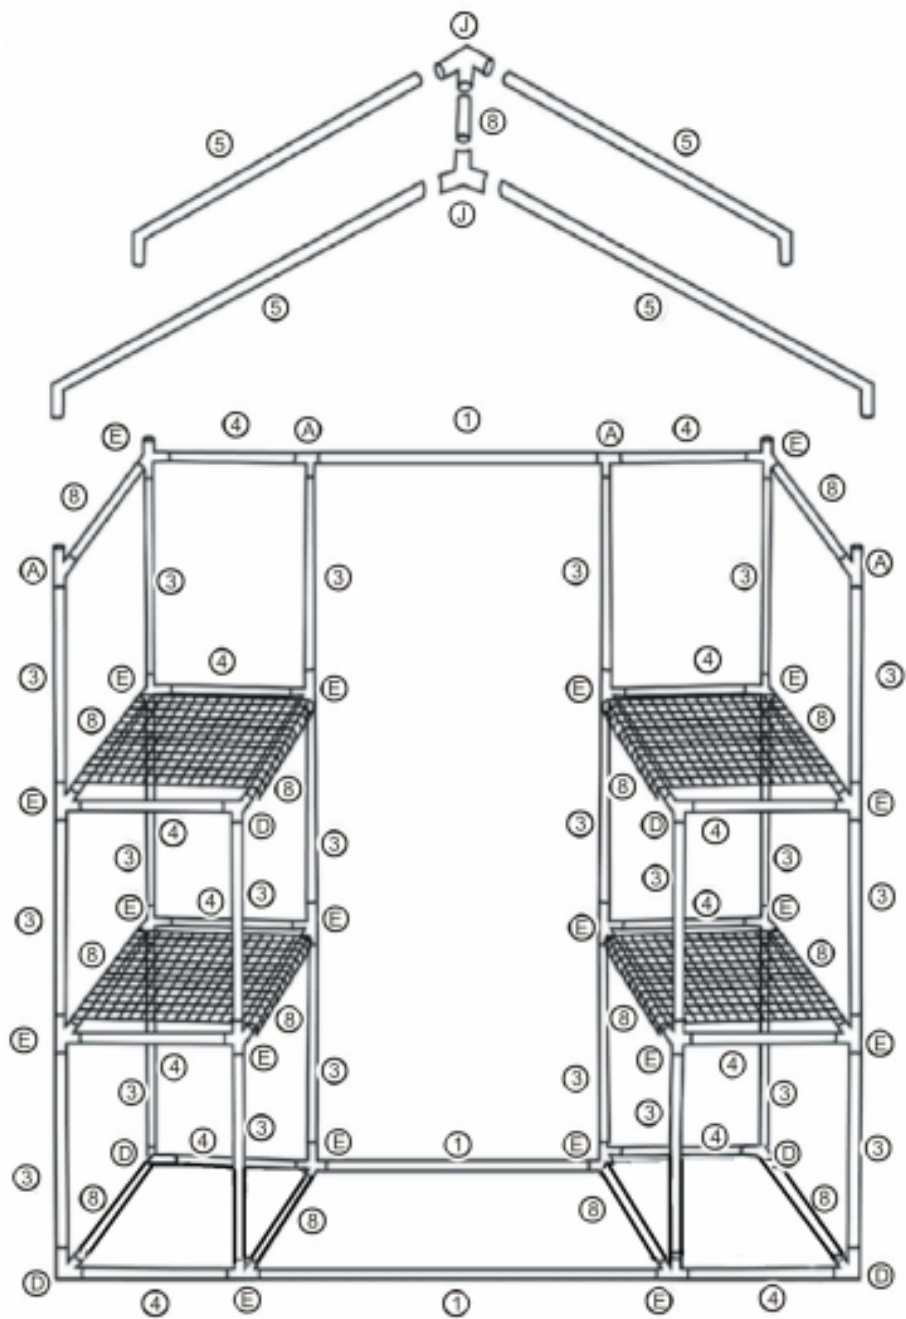


ASSEMBLY

Note:


Ensure you have read through the entire manual, and have everything listed on the Components page, before beginning to assemble.

Assemble the Greenhouse Frame

1. Arrange parts into groups as listed in the Components section of this user guide, unfold cover, and put to one side.
2. Assemble the base with the below parts:

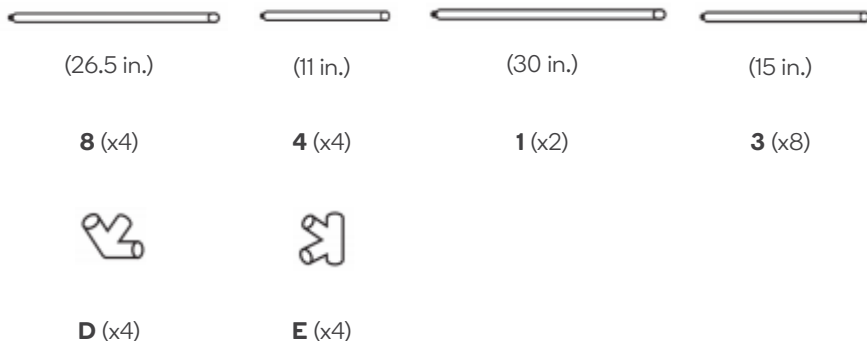

3. After the base is assembled, assemble the first level with the below parts.:

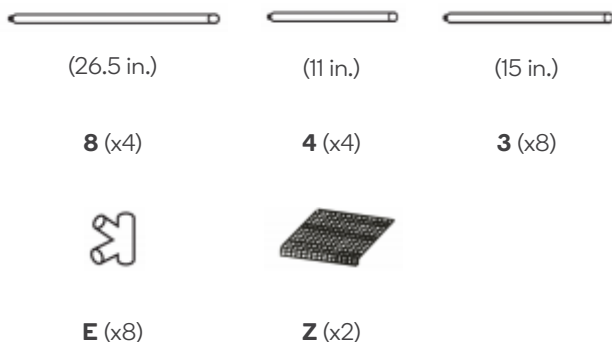

4. Assemble the second level with below parts:



(26.5 in.)

8 (x4)



D (x2)



(11 in.)

4 (x4)



E (x6)



(15 in.)

3 (x6)



Z (x2)

5. Assemble the third level with the below parts:



(26.5 in.)

8 (x2)



A (x4)



(11 in.)

4 (x2)



E (x2)



(30 in.)

1 (x1)

6. Assemble the top level with the below parts:



(26.5 in.)

8 (x1)



J (x2)




(39.5 in.)

5 (x4)

7. To have the frame connected, assemble the frame by pushing downward while connecting two rods at a time, giving it an extra force.

- When the frame is complete, repeat step 7 from all angles, as shown in the image.


This will result in a tighter and smaller frame enabling the greenhouse cover to slide on easily.

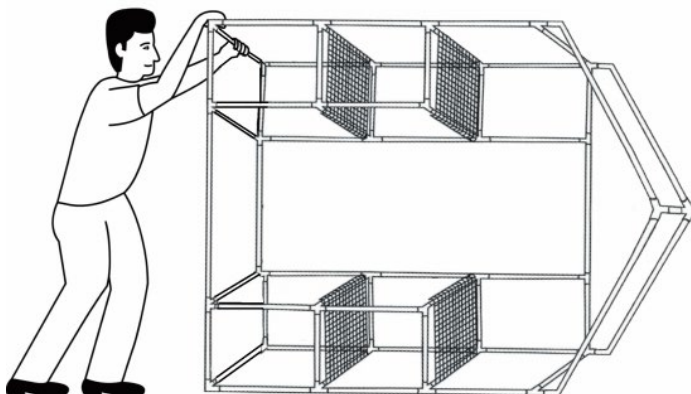


- Once completed, place the cover **Y** over the frame and attach.

Assemble the Anchor Kit


- Hammer the anchors into the soil, placing them on all four sides of the greenhouse.

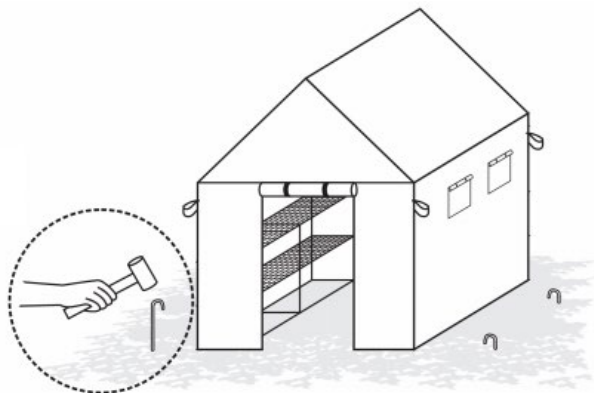


2. Connect the top end of the rope to the greenhouse strap as shown in the image. Repeat this step for all four sides.

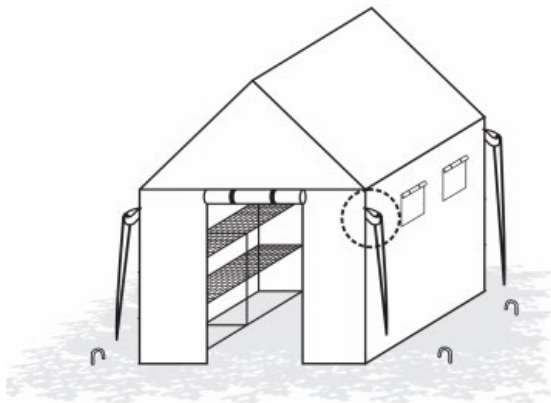

 3. Take the other end of the rope and pass it through the bent side of the anchor as shown in the image. Repeat this step for all four sides.

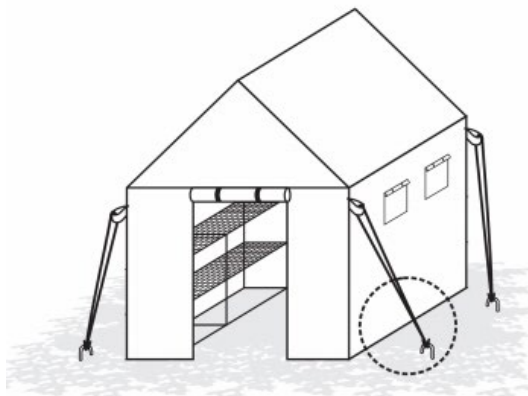



Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan