



GIANT EARPHONE BLUETOOTH SPEAKER PRO


KABTAIRPS2A

SAFETY & WARNINGS

Note: Use the product for its intended purpose only.

- Do not use in extreme temperatures.
- Turn off the device if it will not be used for an extended period.
- Keep away from vibrations and mechanical stresses, which can cause mechanical damage to the product.
- Damage due to negligence or misuse will not be covered by warranty.
- Do not disassemble. This product does not contain parts that are entitled to a self-repair.
- Keep away from children under the age of 3, may contain small parts.
- Cease use immediately if the product is defective, or if there is a visible damage to the product. Contact help.kogan.com before using again.

OVERVIEW

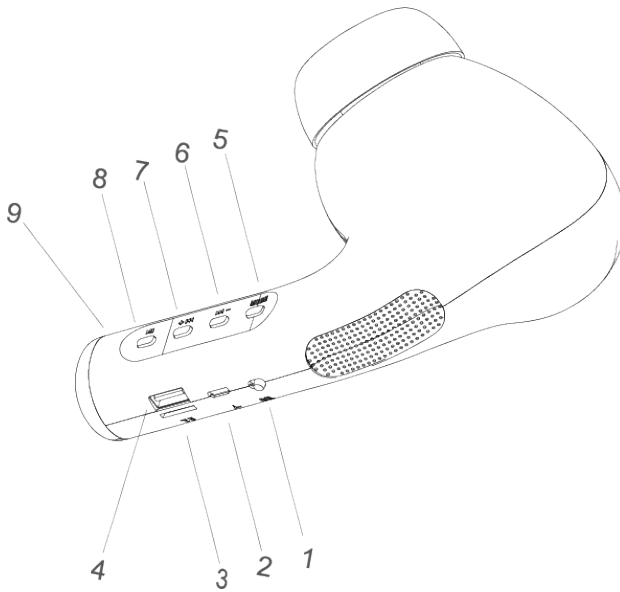

- 1 Power ON/OFF Button
- 2 Charging Port
- 3 micro-SD Slot
- 4 USB Port
- 5 Mode Button
- 6 Previous Song/VOL- Button
- 7 Next Song/VOL+ Button
- 8 Play/Stop
- 9 Microphone

OPERATION

Pairing with a Mobile Phone

1. Press the Power ON/OFF button to turn on the speaker. The default mode is the Bluetooth mode.
2. A voice command stating, "Bluetooth mode, the Bluetooth device is ready to pair" will sound.
3. On your mobile phone, ensure Bluetooth is turned on, and open your Bluetooth connection settings.
4. To connect, select "BT SPEAKER" from the list of available Bluetooth devices. If it does not appear on the list, try refreshing the list on your phone, or restarting the speaker.
5. Your phone will confirm when successfully paired.

Playing in the FM Mode

1. Press the Power ON/OFF button to turn on the speaker. The default mode is the Bluetooth mode.
2. Press the Mode button to enter the "Tune" mode.
3. Long-press the Play/Stop button to automatically search the station. The speaker will autosave the FM station when stopped.
4. Press the Previous Song/VOL- button or Next Song/VOL+ button to switch the channels.

Note: For better tuning experience, we recommend plugging USB charging cable into the USB port which will act as an external antenna.

Playing from the Memory Card

Insert the micro-SD card into the slot. Speaker plays the stored music automatically.

SPECIFICATIONS

Speaker Output	5W 4ohm
Speaker Size	123 x 172 x 111 mm
Bluetooth Version	JL5.0
Frequency Response	20Hz-18KHz
SNR	65dB
Impedance	4ohm
Built-In Battery	3.7V 1200mAh

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan