





2-IN-1 CLOTHES & SHOES DEHUMIDIFIER



KACLSHDHMDA

IN THE BOX



 ①	 ②	 ③	 ④
1 x Hanger connector	2 x Small hanger	2 x Dehumidifier pack	2 x Dehumidifier case

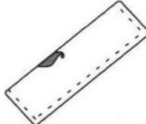INSTRUCTIONS


1. Use as a clothes hanger for garments. Connect the hanger connector (①) to the dehumidifier case (④) as shown below. Make sure the connections are tight to avoid any damage.

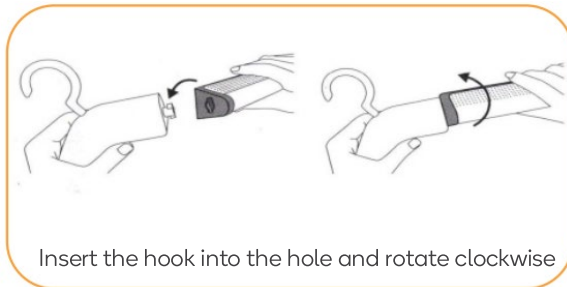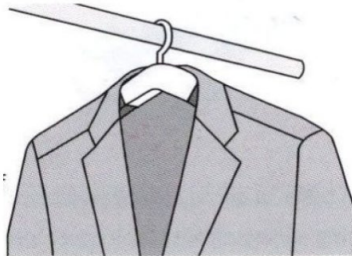

2. Use as a dehumidifier for the entire closet. Connect the small hanger attachment (②) and dehumidifier case (④) as shown below and hang from closet rod or hanger.

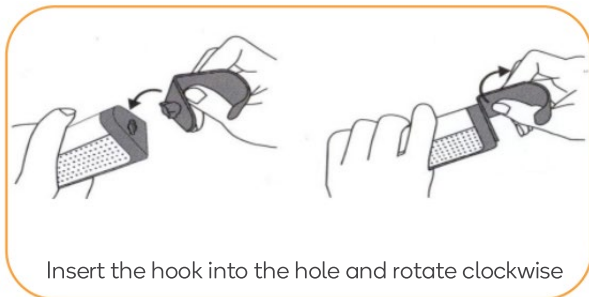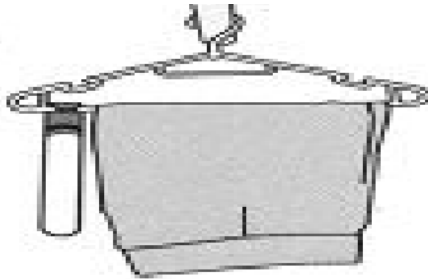


3. Use in shoes to remove moisture and odours.

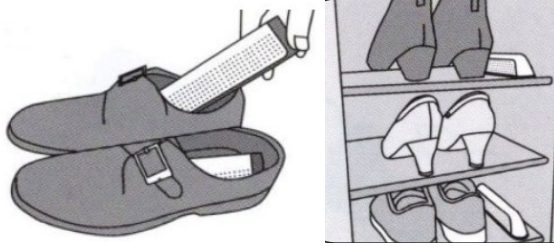

4. The dehumidifier pack (③) is ready for use inside its case. When the dehumidifier pack is full of moisture, the colour indicator will turn pink instead of blue.

To dry the dehumidifier pack, open the case as shown below by pushing down the button located on top of the blue flat surface of the case. Unclip the blue panel, remove the dehumidifier pack only and dry in the microwave, on a radiator or in direct sunlight. See below:

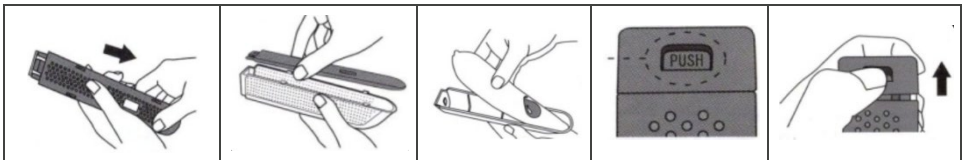

When replacing the dehumidifier pack (③) inside the plastic case (④) make sure that the contents of the bag are evenly distributed for best results. The humidity indicator should be placed facing up, showing through the plastic panel's window.

Note:

- Keep away from children.
- The dehumidifier bag is made of silica gel; avoid contact with skin and eyes. If the dehumidifier pack is damaged, dispose of it immediately.
- Do not microwave for more than 30 seconds at a time.



Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan