



# KID'S MAGIC DRAWING MAT

KAMGDRAWMTA

## SAFETY & WARNINGS

- The pen must be opened clockwise while twisting upward to prevent babies from opening it easily.
- Do not to let the children bite or drink the water of the pen nib.
- Do not use other pens to paint on the mat to avoid staining.
- Do not use a hard object to scratch mat's coating.
- Do not put it close to the iron, dryer, electric heater, open flame or extremes temperature.
- To avoid dangers of suffocation, keep the transparent bag away from kids.

## CLEANING & CARE



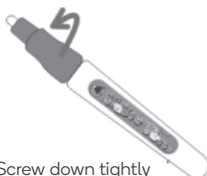

1. Use a small amount of alkaline detergent solution and gently scrub the surface of the mat, then hang dry.
2. Do not wash the mat in a washing machine.
3. If the magic pen nib is dirty, use a neutral detergent to wash.
4. After using the mat, hang and allow it to dry avoid any damp smell.


# OPERATION

## Before first use

Soak the fibre nib in the water until it is completely wet.

1. Add water into the magic pen and you will be able to create artwork on the mat.
2. After about 5 minutes, the drawing will fade as the magic ink dries, allowing it to be reused.
3. To accelerate drying, parents can use a hairdryer to slightly heat the surface of the mat.

 Unscrew	 Add water Soak pen tip	 Screw down tightly	 Draw!
1	2	3	4

			
Start	After 1-2 minutes	After 3-4 minutes	After 5 minutes

### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **[help.kogan.com](https://help.kogan.com)**

kogan