



# **CORDLESS ELECTRIC MOP**

KAMOPEL11VA




# SAFETY & WARNINGS

- This appliance is only intended for use in domestic living environments. Do not use it in a business or industrial environment.
- Remove large particles or substances before using. This product is not for sweeping or vacuuming.
- Do not drench or submerge the unit in water, even during use.
- In the case of jamming by small substances, power off the appliance before removing the obstruction.
- Do not let children use the mop as a toy.
- Use a clean cloth to wipe down the mop when it is powered off.
- Do not bend or apply stress to the metal handle of the product.
- Use caution when waxing wooden floors and always keep safe footing.





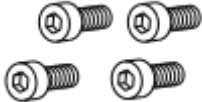

## Battery and charging

- Only use the charger and batteries included with the product. Do not use third party accessories.
- Do not attempt to disassemble or modify the battery and charger.
- Keep the charger away from heat sources such as radiators, ovens etc.
- Do not touch the charger or power adaptor with wet hands
- Ensure to dispose of batteries in an environmentally friendly manner, in accordance with local governmental rules and regulations.
- If there is any damage to the cable, discontinue use and contact [Kogan.com](http://Kogan.com).
- Make sure the unit is powered off before transporting and use the original packaging where possible.
- If the machine will not be used for an extended period, charge the battery to 100%, place it in a dry and cool environment and charge it every 3 months to avoid battery over-discharge.

# OVERVIEW

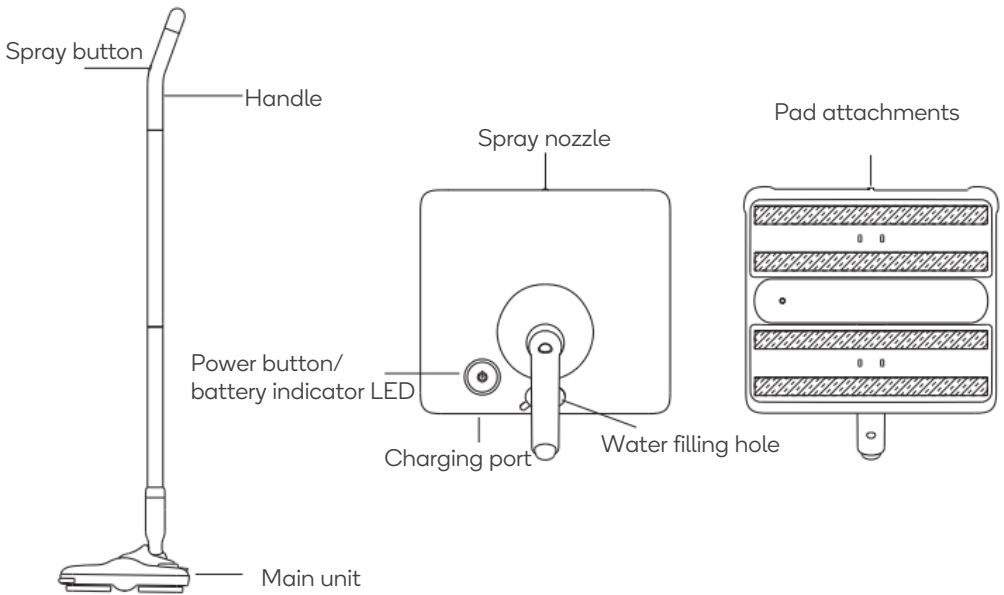


## In the box

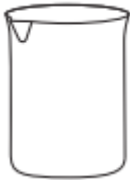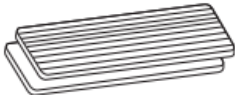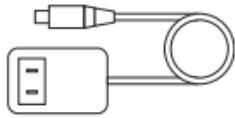		
Measuring cup	Cleaning pads	Power adapter
		
User guide	Screws	Allen key

# ASSEMBLY


1. Connect the metal pipe to the pipe joint, then attach the handle with the fixing screws through the corresponding holes.

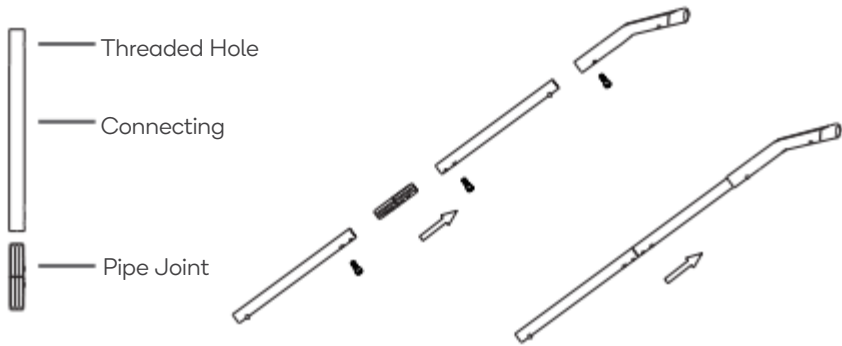


2. Place the base on the ground and keep the joint part straight.

**Note:**


It may take some force to fold the movable handle.

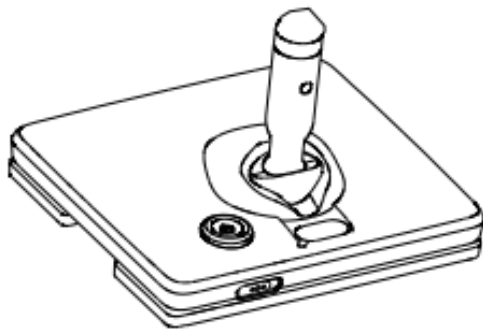

3. Insert the connecting tube into the mop head and screw it in firmly.

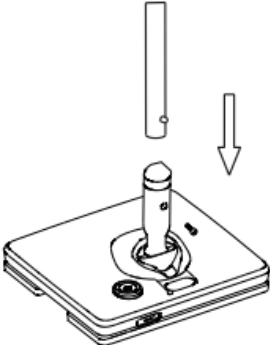

4. Place the cleaning pads on the ground and lift the machine to place it onto the cleaning pads. The cleaning pads will attach to the base of the mop head.

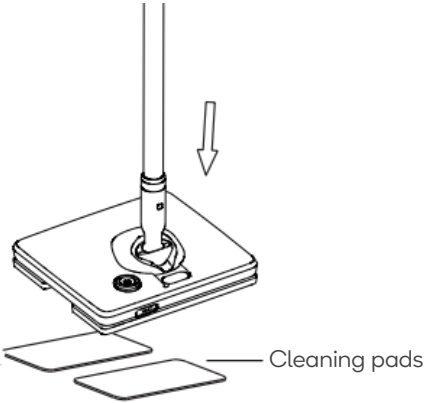

# OPERATION


## First time charging

Pull out the rubber stopper and turn it until the whole charging port is uncovered. Plug in the charger into the charging port, and the battery indicator light will alternate between red and blue while charging. When fully charged (after approx. 3 hours) the indicator will be solid blue.

Turn off the machine before charging.

### Note:


Always use the original power adaptor included with the unit.

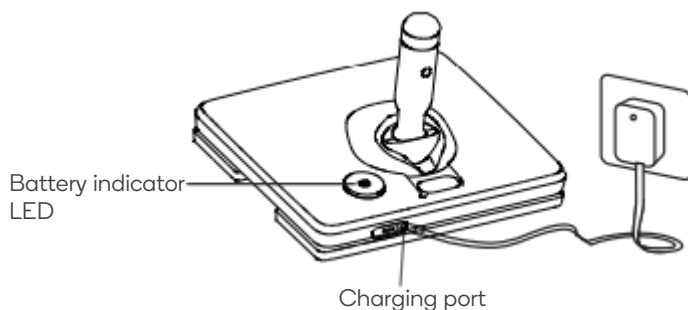

## Fill the water tank

Open the cap of the water tank and fill it, using the measuring cup to add water. Do not exceed the maximum water level line. Securely close the cap after filling.


- Maximum capacity of the water tank is 130ml.
- Matched cleaner or essential oils can be used in the water tank.
- Ensure clean water is used to avoid obstructing the spray nozzle or water pump.
- To avoid the nozzle becoming blocked, do not leave any detergent/cleaning liquid or waxing oil in the water tank for more than 24 hours.

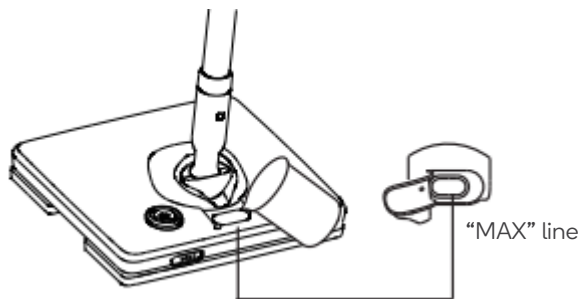

## Power on/off

Press and hold the power button until a tone is heard; the indicator light will illuminate, and the appliance will begin operating.

Repeat this process to turn the unit off.

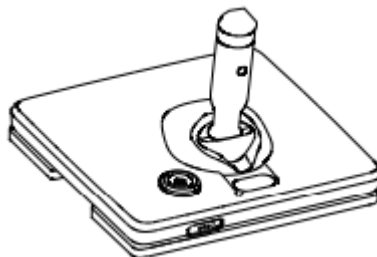




## Spraying water

Press the spray button on the handle and water will be sprayed; releasing the button will stop spraying accordingly.


- Do not operate the spray function while the unit is charging.
- The longest time of spraying will keep 5 seconds with one press.
- Avoid using the water spray more frequently than every 1s.

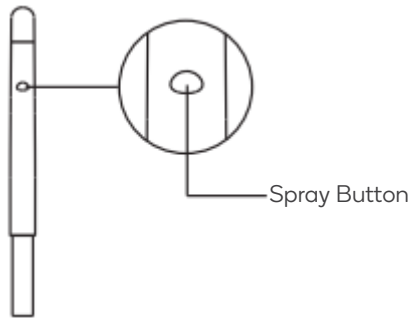

## Battery indicator LED


Briefly pressing the power button will display the current charge level:

- Blue indicates sufficient battery.
- Solid red indicates lower battery and that charging will soon be required.
- Flashing red indicates that the battery has been depleted. Charge the unit as soon as possible.

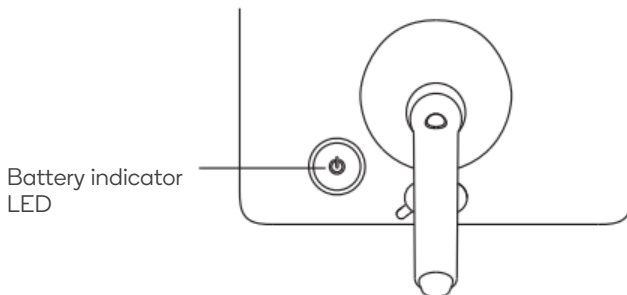

## Replacing cleaning pads


Turn the machine upside down and hold the edge of the pad and then tear off it.

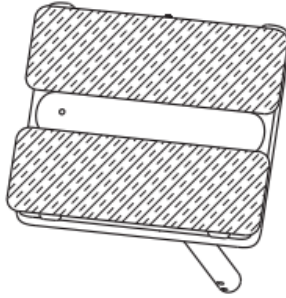

## Replacing handle batteries

After extended use of the product, if pressing the spray button emits no water, the remote batteries in the handle may need to be replaced.

- Remove the screw on the back of the handle and pull out the tail cap. Replace both AAA batteries inside.

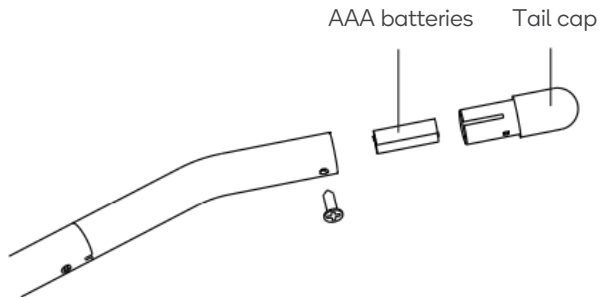

## Operation Tips

Pad attachment area

The attachment area may collect fibres after multiple uses. Gently clean with a toothbrush.

Cleaning pads

Clean the pads under water and dry after using or use disposable cleaning pads.

# SPECIFICATIONS

Item	Parameters
Battery Volume	1500mAh
Rated Voltage	DC 12V
Rated Power	35W
Adapter Output Voltage	DC 12.6V 1A
Charging Time	2.5-3H

# TROUBLESHOOTING

Appliance does not operate	Low battery: ensure the battery is charged before use
Will not charge	Ensure the original adaptor is used.
	Check if the charging line is in good contact with the charging port
No water spray	Check the water tank for water.
	Change batteries for the control on the handle
	The spray will work only when the machine is operating
Difficulty mopping the floor	Ensure that ample battery charge is remaining
	Check if the correct cleaning pads are being used and ensure they are not excessively wet.
	Ensure that surface dirt and larger detritus is swept up before mopping
Water stains on the floor	Keep the cleaning pad dry before using
	Too much water sprayed
	Use a dry cleaning pad to soak up water on the floor

### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **[help.kogan.com](https://help.kogan.com)**

kogan