



# 10000MAH 22.5W PD POWER BANK

KAPB10K225A



# SAFETY & WARNINGS

## Caution

- Fully charge and discharge the power bank three times before first use, leaving it for an additional 2 hours these first three times to maximise the performance of the battery.
- Do not attempt to repair this product yourself. If the product or its power supply experiences any malfunction or damage, stop using it immediately and contact Kogan.com to arrange a repair.
- Avoid using this product in the following environments: high temperature, low pressure, low temperature, humidity, dust, strong magnetic fields and long-term exposure to sunlight. It is recommended that you at an altitude of 3000 meters, 0 ° to 35°C and humidity of 5-95% of the environment using the product.
- This product must not be exposed to dripping and splashing water, also it should not be placed in the annexe next to items such as cups filled with liquid a class.
- Dispose of this product and accessories following all relevant local environmental regulations.

## Tips

- If the power bank will not be used for a long time or the battery life becomes shorter, it is recommended to fully discharge and then recharge the battery. If it will not be used for a long time, place it in a dry environment between 5–35 °C.


## Environmental Claims

Name	Name and Content of Hazardous Substances					
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
Power bank	X	0	0	0	0	0
Accessories	0	0	0	0	0	0

O: Means the PH substances in the material is under the GB/T 26572 standard

X: Means the PH substances is out of the GB/T 26572 standard.

# OVERVIEW

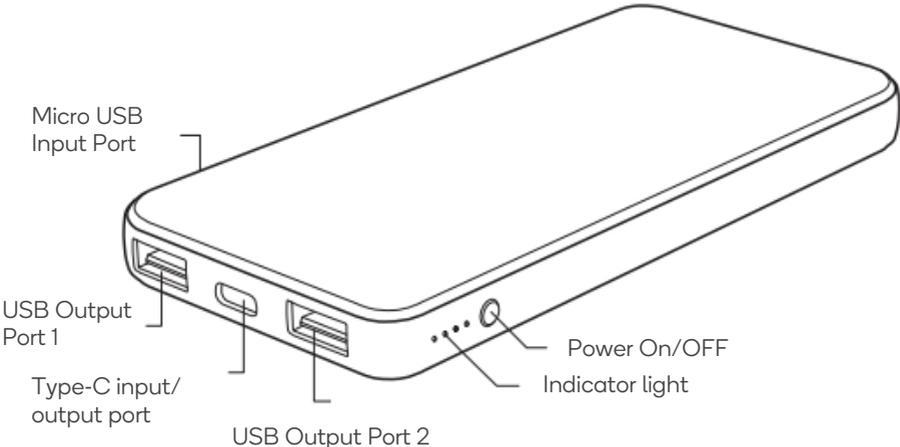

# INSTRUCTION

## Power Indicators

The 4 LEDs on the device show capacity show the capacity. The power bank will display the current charge level when it is turned on.

- LED illuminated
- ◉ LED flashing
- LED off

## While charging

Indicators	Capacity	Note
◉ ○ ○ ○	0%--25%	The power bank is fully charged when all the light is lighting
● ◉ ○ ○	25%--50%	
● ● ◉ ○	50%--75%	
● ● ● ◉	75%--100%	
● ● ● ●	100%	

## While discharging

Indicators	Capacity	Note
◉ ○ ○ ○	0%--25%	When the power is close to 5%, the last light will flash continually as a low power indicator
● ○ ○ ○	25%--50%	
● ● ○ ○	50%--75%	
● ● ● ○	75%--100%	
● ● ● ●	100%	

## Charging

Charging the power bank:

- Use a USB cable to connect cable power bank's Micro USB port to a suitable USB-A charging port such as a computer USB port or your mobile phone or tablet's power adapter.
- Once connected, the power bank will charge automatically and the power indicators will illuminate to show the current charge level (see previous page). When the battery is fully charged, all status indicator LEDs will be solid.

Charge connected device:

- Before connecting any device for the first time, confirm that its charging voltage matches the output voltage of the power bank.
- Connect the device to the power bank using a originally-supplied charging cable or another suitable one.

## SPECIFICATIONS

Battery type	Grade-A polymer battery cell
Capacity	10000mAh/37Wh (TYP)
Input PD	PD 5V=3A, 9V=2A (18W MAX)
Output PD	PD 5V=3A, 9V=2A, 12V=1.5A (18W MAX)
Input Micro	5V=2.4A 9V=2A
Output 1	5V=4.5A 5V=3A 9V=2A 12V=1.5A
Output 2	5V=4.5A 5V=3A 9V=2A 12V=1.5A
Total Output	Maximum 22.5W
Size	144 x 68 x 16.2mm
Product weight	234g



### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **[help.kogan.com](https://help.kogan.com)**

kogan