

USER GUIDE

kogan.com



10000MAH 18W PD POWER BANK

BLACK ALUMINIUM

(KAPB10KALBA)

SAFETY & WARNINGS

Caution!

- When using for the first time, note that the power bank will achieve its best performance after two to three times fully charge and discharge.
- Extend the charging time for 1-2 hours in the first three times to maximise the performance of polymer battery.
- Do not attempt to disassemble and modify the power bank.
- Avoid making physical damage to the power bank.
- Avoid using this product in the following environments: high temperature, low pressure, low temperature, humidity, dust, magnetic field strong and long-term exposure to sunlight.
- Recommended conditions for use are between 0°C to 35°C, with humidity of 5% - 95%.
- This product must not be exposed to dripping and splashing water. Keep away from liquids, including cups that may spill.
- Follow the relevant local environmental regulations to dispose of the product and accessories.

Tips:

- If you plan to not use the power bank for a long time, it is recommended to fully charge the battery before storing, and to store it in a dry environment with a temperature range from 5 - 35°C. Avoid direct exposure to sunlight.
- Fully discharge then perform full recharging if you have not used the power bank for more than three weeks. Failure to do so may shorten battery life.


Environmental Claims

Name	Name and Content of Hazardous Substances					
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
Power bank	X	0	0	0	0	0
Accessories	0	0	0	0	0	0

O: Means the PH substances in the material is under the GB/T 26572 standard

X: Means the PH substances is out of the GB/T 26572 standard.

OVERVIEW

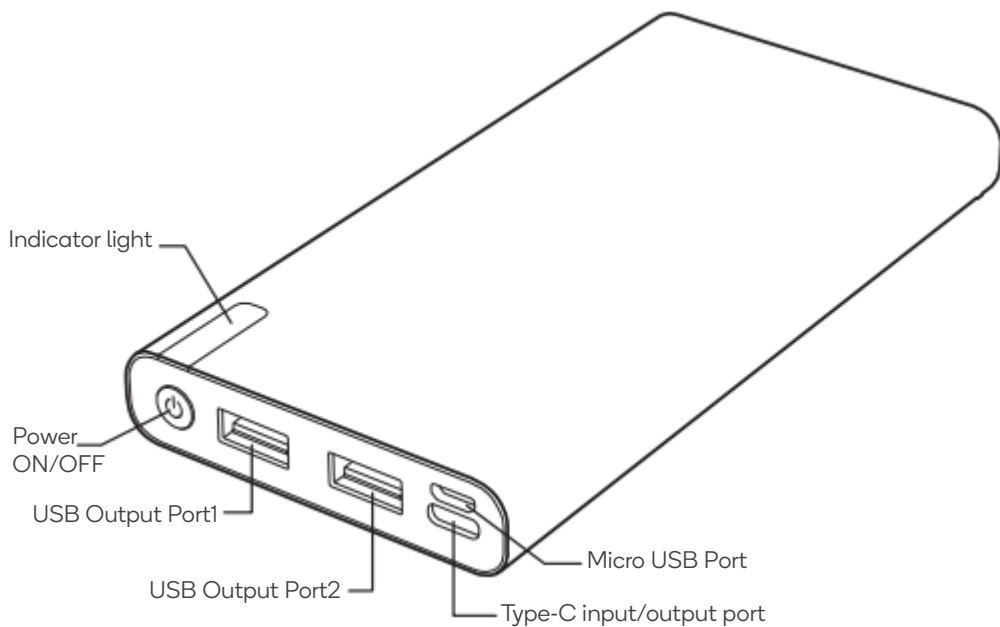

In the box:

- 1 x Power bank
- 1 x USB Cable
- 1 x Manual

OPERATION

Power Display

After starting power bank, the in-built intelligent management system will perform a self-test, and the screen will display the current power for each of the three outputs.

Digital display range: 0-100

100 = full power.

Status	Display	Power	Note
Charging the power bank	Flashing	Digital precision display	While charging, if the display reads "100" and is not flashing, the power bank is fully charged.
Providing charge to attached devices	Solid	Digital precision display	During discharge (providing power to devices), if the display reads "00", then the power bank is out of power.
Not charging or providing charge.	Solid	Digital no-precision display	Push the button and the power bank will automatically turn off after for 8 seconds

Charging the Power Bank

- Connect the cable USB port to the charging device and the other end to the Micro input connector of the power bank.
- After connecting, the power bank is automatically charged and the current power level on the battery status indicator flashes. When the battery is fully charged, the status indicator light will be on.

Providing charge to attached devices

- Check whether the charging voltage of the digital device matches the discharging voltage of the power bank.
- Select one matching charging cable, connect one end to the power bank output interface, the other end to the digital device, the power bank will automatically recognise to charge a digital device.

SPECIFICATIONS

Battery type	Grade-A polymer battery cell
Capacity	10000mAh/37Wh (TYP)
Micro-USB Input	DC 5V/2.4A, 9V/2A
Type-C Input	PD 5V/3A, 9V/2A (18W Max)
Type-C Output	PD 5V/3A, 9V/2A, 12V/1.5A (18W Max)
USB Output 1	DC 5V/3A, 9V/2A, 12V/1.5A (18W Max)
USB Output 2	DC 5V/3A, 9V/2A, 12V/1.5A (18W Max)
Total Output	Maximum 18W
Product dimensions	141 x 71 x 16mm
Product weight	280g

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan