



SAUSAGE ROLL MAKER

KASAGROLMKA

SAFETY & WARNINGS

WARNING: Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against the risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquids.
- If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean and dry and heat-resistance surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if damaged or malfunctions.
- Do not touch hot surfaces. Only use the handle.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. The danger of an electric shock and/or fire.
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.

WARNING: Do not leave the appliance unattended when in use or when connected to mains power.


- Do not operate the appliance inside a cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is not intended to be operated using an external timer or separate remote-control system

Use only heat-proof synthetic or wooden utensils only when taking food out in order not to damage the non-stick coating of the heating plates. Make sure that the utensils are not pointed nor have sharp edges.

CAUTION: Hot surface. Care must be taken. The surfaces are liable to get hot during use.

For cleaning the cooking surface, please refer to the section “Cleaning & Care”.

OVERVIEW

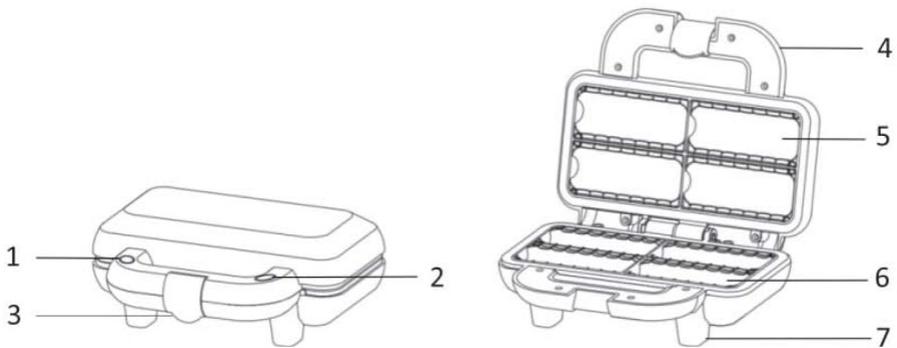

1	Red power indicator	4	Handle
2	Green ready indicator	5	Top baking plate
3	Locking clip	6	Bottom baking plate
		7	Rubber feet

INSTRUCTIONS

Before first use

Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.

1. Unpack the appliance and check if all parts are there and undamaged. In case of shipping damage or incomplete package, contact Kogan.com.
2. Clean the inside and outside of the appliance with a damp cloth or sponge. Wipe dry with a soft dry cloth.

WARNING: Do not immerse the appliance in water or any other liquid to clean.

3. Dry all components thoroughly before use.
4. Place the appliance on a flat, heat-resistant, stable surface and ensure a minimum of 10cm free space around the appliance. Do not operate the appliance inside a cabinet or under a wall cabinet.
5. Plug the appliance into an electrical power outlet.

Note:

Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. Rated voltage: 220-240V- 50-60Hz

On first use, there may be a small amount of haze and an odour emitted from the appliance. This is perfectly normal and will subside after a few minutes of use.

6. Allow the appliance to heat up for approximately 5 minutes. Apply a thin coating of cooking oil to the cooking plates and carefully rub it in with a paper towel. The cooking plates need only be seasoned when using the appliance for the first time.

WARNING: The cooking plates will get very hot.

7. Unplug the appliance and now it is ready for use.

OPERATION

Standard premade puff or shortcrust pastry sheets (size: 270mm x 140mm x 2pcs sheets) can be used. You can also prepare puff pastry by yourself.

1. Close the appliance and plug the appliance into mains power outlet socket, the red power indicator light will illuminate, and the appliance will begin to heat. The red power indicator light will remain on when the appliance is connected to mains power. There is no need to preheat the appliance.



2. Open the lid fully and lay a piece of pastry onto the bottom baking plate. Take care; the cooking plates will be hot.
3. Form hollows in the four dishes using the back of a spoon. Alternatively, the weight of the filling will form the hollows. Ensure the pastry covers the edges to avoid fillings oozing out during cooking.
4. Spoon in the desired fillings. See recipes for different fillings suggestions. Do not use hot fillings as the pastry base will become soggy.



CAUTION: Do not overfill your sausage roll maker cases or have excess liquid ingredients (sauces, gravies, custards). This will result in over-flow from the sausage roll maker. Sausage roll maker filling is hot and can scald.

5. Lay another pastry sheet on the top of the fillings. Ensure pastry covers the edges to avoid fillings oozing out during cooking.

CAUTION: Only touch the pastry as the sausage roll maker will be very hot.



6. Gently close the lid until the two handles can be attached with the locking clip. Do not force the lid to close.
7. The green ready indicator will illuminate when the cooking plate has reached the right cooking temperature, the appliance will stop heating. The appliance will begin to reheat again when the green ready indicator light dims. This cycle will continue to maintain the optimum baking temperature in the appliance. This is normal.
8. Cook for approximately 10-12 minutes or until golden brown. The cooking time may vary depending on the fillings and the desired taste.
9. Note: During cooking, a whistling sound may be heard. This is due to steam escaping from the sausage roll maker and is normal.



10. The cooking progress can be checked by simply unlocking the locking clip and opening the sausage roll maker, if your food still requires further cooking, close the appliance and lock it to continue.

CAUTION: During cooking, open the sausage roll maker slowly and carefully, as the excess filling may overflow and cause scalding.

Some fillings may melt and cause sticking. To free sticking ingredients use a heat resistant plastic spatula or wooden utensil. Never use a sharp metal object such as a knife as this will damage the non-stick surface.

Care must be taken whilst cooking as steam may rise from between the two cooking plates.

Note:

It is not necessary to wait for the appliance to cool down before the second cooking.

CLEANING & CARE

To prolong the life of the non-stick coating, the appliance should be cleaned after each use.

CAUTION: For electrical safety, do not immerse the sausage roll maker in water or a dishwasher.

- Always unplug the sausage roll maker from the mains power supply before attempting any cleaning or maintenance.
- Ensure that the sausage roll maker has completely cooled down before cleaning, as it gets very hot during use.
- Clean the baking plates and outside of the appliance with a damp cloth or soft brush. Do not use anything abrasive that can scratch or damage the appliance.
- Dry thoroughly.

Storage

1. Unplug the sausage roll maker from mains power.
2. Allow the appliance to cool down completely.
3. Clean and dry the appliance.

WARNING: Do not wrap the power cord around the appliance.

4. Store the appliance in a cool, dry location and out of the reach of children.

SPECIFICATIONS

Voltage	220-240V- 50-60Hz
Power	850W

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan