



KIDS' SMARTWATCH

KASMRWTCPKB, KASMRWTCBLB

SAFETY AND WARNINGS

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the below precautions:

- Do not disassemble.
- Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit.
- Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.
- Do not dispose of in fire.
- Do not handle damaged or leaking battery. Keep the battery out of the reach of children. Keep the battery dry.
- If you ever notice any signs of damage, cease use, and contact Kogan support.
- If you find the time between charges is considerably shortened with no change in usage, the battery could be nearing the end of its life.
- Dispose of the item at a suitable waste station, as the battery cannot be added to normal waste.
- Keep the rubber cover of the micro USB port closed lightly while it is not in use in order to prevent dust or water from getting into the micro USB port.
- Keep the watch clean by wiping it with a slightly damp cloth.
- Keep the watch out of direct sunlight and away from any direct heat source.
- Do not drop the watch on a hard surface and do not expose it to moisture or immerse it in water.
- Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by:
 - Blowing on the lens.
 - Gently wiping the lens with a dry cloth.
- Charging should only be completed by an adult.

OVERVIEW

Introduction

This smart watch is a great wearable gadget for children! In addition to showing the time, you can also take photos, shoot videos, record your voice and play games!

When the watch's switch is off, it will not be possible to charge the watch or use any of the activities. Please note, it is not necessary to turn off the power switch during daily use.

The watch may come with a small amount of charge, but we recommend a full charge before use. A full charge will take about 3 hours.

Components



What's in the box

- x1 Smart Watch
- x1 Micro USB cable
- x1 User Guide

OPERATION

Getting Started

Long press the Home button on the right side of the device to turn the Smart Watch on.

Charging the Battery

Connect the Smart watch to a computer with the included micro USB cable to charge the battery.

Lift up the rubber cover of the Micro USB port on the side of your watch. Insert the micro USB cable (small end) into the Micro USB port on the watch. Insert the larger end of the micro USB cable into a spare USB port on the computer.

Once the connection is successful, you will see the battery charging symbol displayed on the watch screen for one second, and then the data transfer symbol. The battery will continuously charge whilst connected, but you can open PC to find folder smart watch to transfer data at the same time.

Monitor the watch regularly throughout the charging process.

When the battery is fully charged. A full battery symbol displays on the screen. Disconnect the watch from the computer.

Note: It will take approximately 3 hours to fully charge the battery. The actual charging time depends on the power supply, the remaining charge and the ambient temperature of the charging environment. The optimum ambient temperature is 0° C - 40° C (32° F - 104° F). If your watch needs longer than 3 hours to fully charge, please try charging from a different USB power source.

Battery Life

The time the battery lasts between charges depends on usage. Like other electronic devices, more frequent usage will mean the battery will drain more quickly. Some activities will be more demanding on the battery, such as taking photos and videos. The expected battery life is shown below. This is based on the assumption that the screen is turned off when not in use.

Condition	Battery Time
Low Usage	2 weeks
Typical Usage	2-3 days
Heavy Usage	1 day

How to Operate Your Watch

Make sure the power switch is in the on position and the battery is charged before use.

Press the home button to wake the watch up. Press home for 3 seconds to wake up the watch from standby.

When the clock is displayed on screen, press the home button to go to the home menu.

If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after recharging.

When the battery level is low, only the clock display function is available. We recommend recharging the battery as soon as possible before further use.

Automatic Screen Off

To preserve battery life, the screen will automatically shut off after a short period of time when in clock mode.

The auto screen off time can be set in Settings / Advanced / Auto Screen Off. Please refer to the Settings section in this manual.

In other activities, it will return to clock mode automatically if there is no input for 1 minute. When in camera mode, it will auto exit after 3 minutes. When in slideshow, the auto exit time is 15 minutes.

If you have a timer running, it will return to the timer screen instead of returning to watch mode. The watch will not shut off automatically when the timer is running.

Clock Display

When the home button is pressed, the clock will be displayed.

Tap the center of the screen to switch the clock face between analog and digital.

Swipe left or right on the screen to see more clock faces.

Press the home button to display the home menu for selecting other activities.



Some of the available clockfaces, both digital and analog style.

Home Menu 🏠

Press the home button  to display the home menu, the following functions are available:

- Camera
- Video
- Photo Gallery
- Video Gallery
- Voice Recorder
- Pedometer
- Music Player
- Games
 - 2048
 - Basketball Shoot Master
 - Bee War
 - Pinball Hit
 - Ultimate Racing
- Time Teacher
- Alarm
- Timer
- Stopwatch
- Torch
- Calculator
- Calendar
- Settings



Tap the icon to enter the activity.

Swipe left or right to scroll through the menu pages.

To change the menu layout to large icons, go to Settings > Menu Layout.

Camera



Press the camera button  on the screen to take a photo.

Tap the Photo Gallery  button to view photos. The latest file will be shown first. Tap the arrow icons or swipe the screen to see the previous or next photo. To delete a file, tap the  icon on screen and follow the prompts.

To swap between the two cameras (upwards-facing and front facing), tap the  button.


Video


Press the video button  on the screen to begin video recording. Press the same button again to end video. The video will automatically save when completed.

Tap the Video Gallery  button to view videos. The latest file will be shown first. Tap the arrow icons or swipe the screen to see the previous or next video. To delete a file, tap the  icon on screen and follow the prompts.

To swap between the two cameras (upwards-facing and front facing), tap the  button.

Voice Recorder

Tap  to start voice recording.



Tap  to save the recording.

Tap  to play the last recording.

Use the arrows to select previous or next recording.

Music Player

To upload music to the watch, use the Micro USB cable to connect your watch to a computer/laptop. Copy any MP3 music files to the watch folder "My Music". After transfer is complete, safely eject the watch from your computer and unplug the USB cable.

To play music you have transferred to the watch, select the Music Player  icon from the main menu, then press play  to begin playing a file.



Play



Volume Up



Next



Pause



Volume Down



Back

Pedometer

Use the pedometer to count your steps! Follow the onscreen prompts to start or reset the pedometer. When started, the count will be updated every 30 seconds.

Games

There are 5 built-in games on the smart watch. Swipe the screen to see the game icons, then tap one to play.

2048

Swipe up, down, left or right to slide the tiles across the board. All tiles will slide in the swiped direction if space is available, and one new tile will appear with every swipe.

When two tiles of the same number are swiped into each other, they will combine as one tile with the combined value (two 2s become 4; two 4s become 8; two 8s become 16, etc). The aim of the game is to create a tile at the value of 2048! But be careful, as if no more space is available on the board, it's game over.

Basketball Shoot Master

Press the basketball to shoot, but to get it in the hoop you'll need to time it right!

Bee War

Tap the screen left or right to move the fighter to shoot. Purple enemies are strong, and require two shots to beat. Score as many points as you can, but be careful, as you only have 3 lives.

Pinball Hit Bricks

Destroy all bricks to progress to the next level. White bricks give a special 3-ball bonus, and blue bricks require two hits to destroy. Score as many points as you can!



Ultimate Racing

Hold the car to move left and right to switch lanes. The car in front is dropping coins, and the more you collect, the higher your score will be. If you crash, it's game over.

Time Teacher

The time teacher is a friendly Panda who can say the time for you.

Tap the **Hour** or **Min** (minutes) icon to select the time you want the panda to say.

Tap  to increase by an hour / minute. Tap  to decrease by an hour / minute. Tap the clock or the panda to tell the time.

Alarm

Select the alarm option from the main menu. Here you can set an alarm.

Tap the clock icon to change the alarm time. Tap  icon to toggle the alarm on or off.

To change the alarm time, select the hour and minute by swiping up or down on the hours, minutes or AM/PM.

Tap the arrow icons to display the alarm tone selection menu. There are 5 built-in alarm styles. Swipe left or right to preview the different tones and animations.

Tap  to confirm the selection.

Once you've chosen your alarm, tap the  icon to confirm.

Note: If the battery level is too low, the alarm will need to be set again.

Timer

Set a countdown timer here.

Tap the play icon  to start the timer.

While the timer is running, tap  to pause the countdown, then tap  again to resume.

Tap  to stop the countdown and reset the timer.

Stopwatch

Tap the play icon  to start the stopwatch.

While the stopwatch is running, tap  to pause the timer, tap  again to resume.

Tap  to stop the timer and reset the stopwatch to zero.

Torch

Swipe on the menu and tap the red button of the torch to toggle on/off.


The torch will remain on during other activities until you return to the torch menu to turn it off.

Caution: Be careful when using the torch. Do not point the light directly at people or animals, as it may cause eye damage. Torches are not toys, and must be used with care.

Calculator

Use the calculator app for basic mathematical calculations. Don't use this to cheat on tests, though, or you'll never learn how to work out the answers yourself.

Calendar

Use the calendar to view the date. If the date shown is incorrect, please go to the Settings  menu to reset the date and time information.

Settings

In settings, swipe left or right on the screen to scroll through different setting submenus. Here you can adjust the following items:

- Volume
- Brightness
- Date
- Time
- Parental Controls
- Advanced Settings:
 - Storage location
 - On-screen display language
 - Factory reset

Parental Controls

Set time-limits for how long games can be played per day.

To use, go to the Settings  menu and open the Parental Control submenu.

Tap and hold on the screen for three seconds. Next, you will be asked to identify a colour on the screen and tap three times to confirm. Once this has been completed, you will gain access to the parental controls.

Select between a daily limit of 15, 30, 60 or 90 minutes, or no limit. You can also choose to disable the games completely. Tap the  icon to confirm the selection.

Tips

- When you touch the screen, ensure your entire finger is pressing the screen and hold for a second. Do not use your fingernails.
- To view photos or videos on your laptop/computer, connect the watch using the included Micro USB cable. Photos can be found in the "Photos" folder, videos in "Videos", and voice recordings can be found in the "Audio" folder.

TROUBLESHOOTING

Please check the troubleshooting steps outlined below, and if you are still having any issues, contact Kogan.com support.

Problem	Solution
The watch is not turning on	<ul style="list-style-type: none">• Hold the home button for 3 seconds to turn off, then hold the home button again to turn back on.• Next to the USB port, there is a small hole for resetting. With adult supervision, insert the end of an unfolded paper clip to press the internal button and manually perform a hard reset. Remove the unfolded paper clip once complete, then hold the home button for 2 seconds to power on.• If it still doesn't work, try to recharge the battery and try again (refer to the battery recharging section for details).
The watch is not charging	<ul style="list-style-type: none">• Try to charge the watch with a different micro USB cable.• Check if the computer's USB port or adapter you are using to charge the device (not supplied) is working with other electronic devices.• If still not working, perform the hard reset method as described above.
Screen display is abnormal	<ul style="list-style-type: none">• Hold the home button for 3 seconds to turn off, then wait 30 seconds. Hold the home button again to turn back on.
Cannot connect to computer	<ul style="list-style-type: none">• Check the connections on the Micro USB cable between the watch and the computer. Ensure the cable is securely connected at both ends.• Hold the home button for 3 seconds to turn off, then wait 30 seconds. Hold the home button again to turn back on.• Unplug from the computer and reconnect.
Image taken is not clear	<ul style="list-style-type: none">• Make sure the lighting conditions of the shooting environment are good.• Check to see if the camera lens is clean. If you find some dust or dirt on it, please try blowing on the lens, and gently wiping the lens with a dry cloth.
Not enough memory / storage space	<ul style="list-style-type: none">• If you have run out of memory, you will need to delete some of your files. These may include photos, videos, voice recordings, and music files. You can transfer these to your computer before deleting from the watch.• Alternatively, to delete all data, head to Settings > Advanced > Storage Location and clear the memory.

SPECIFICATIONS

Display	1.54" IPS touch screen
Photo Resolution	240 x 240
Video Resolution	240 x 240
Storage Capacity	32MB + 128MB
File Format	Photos: Standard Baseline JPEG Video: AVI (Motion JPEG)
Connectivity	Micro USB 2.0 cable (included)
Battery	400 mAh Li-ion Polymer battery (non-replaceable)

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to help.kogan.com.

kogan