



# 2000W STEAM CLEANER


KASTMCLN2KA



# SAFETY & WARNINGS


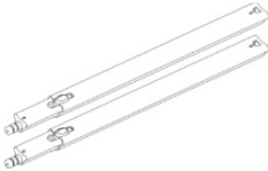




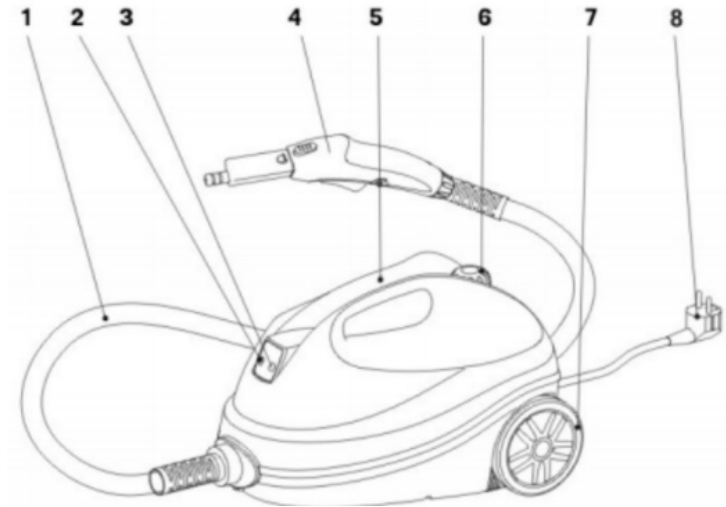





- Read all instructions before using the appliance and retain for reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This product can draw a large amount of power in certain circumstances. The device must be connected to a grounded power supply that has been installed by a professional in line with Australian Standards.
- This product should not share an outlet or power board with other devices, as doing so may trip the mains power or could potentially damage your product.
- Always use a surge protected power board to power the device.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is designed for consumer use: follow directions and use only as described.
- Do not apply steam in the same area for longer than 5 seconds or on glass for longer than 2 seconds.
- Maintain a safe distance from the steam outlet, at least 20cm.
- The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- The appliance must be unplugged after use and before carrying out user maintenance.
- Do not change, replace or remove any parts until the appliance has cooled.
- Do not open the safety valve during usage.
- Do not use with any liquid other than water.
- Keep the appliance away from external heat sources.
- Use only in a ventilated room.
- Do not use near the glass in low temperatures.
- Close the safety valve before use and open only once the appliance has cooled.
- Do not use with an extension cord unless necessary and if so, ensure it is suitably rated and it is handled safely as is the product's power cord.
- Do not allow the power cord to be exposed to water, heat, direct sunlight or overhang where it can be pulled or otherwise be damaged or pose a hazard.
- This appliance contains no user-serviceable parts. If it suffers any failure or damage, cease usage and contact Kogan Support after consulting the Troubleshooting section of this user guide.

# OVERVIEW

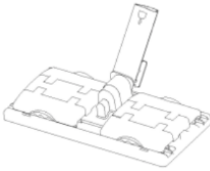

No.	Name	Function
1	Soft pipe	Steam delivery
2	Indicator (red)	No water
3	Indicator (green)	Steam ready
4	Steam gun	Dispense
5	Handle	Carry appliance
6	Safety valve	Relieve pressure
7	Wheel	Easy transport
8	Power switch	Turn on/off
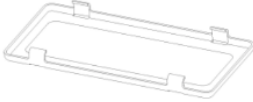
# ACCESSORIES


		
1x Cord retractor	2x Extension tube	1x Glass brush
		
1x Measuring cup	1x Ironing brush	1x Large nozzle
		
1x Floor brush	1x Steel brush	1x Floor brush cloth
		
1x Carpet glider	1x Nylon brush	1x Ironing cloth

Note: Two O-rings are supplied with the product and should be replaced if the handle overheats.




## Steam Gun

No.	Name	Function
1	Steam nozzle	Steam output
2	Accessory lock	Connect accessories and press down to remove
3	Steam trigger	Control steam output
4	Child lock	Lock steam trigger

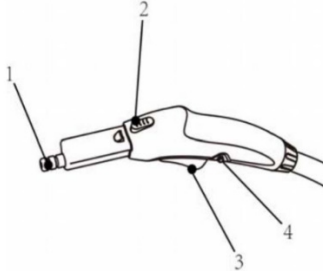

## Setup

Fill with 0.5L - 1.5L clean water only:

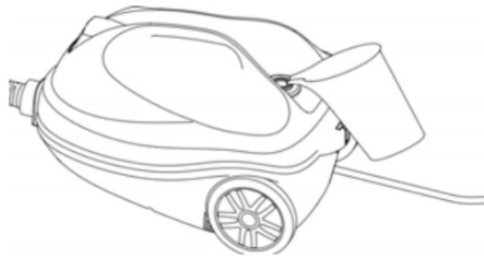

- Ensure that no residual water remains from previous use. Calcification can occur if the water is not completely drained after each use.
- Do not fill past the maximum 1.6L capacity.

## Power on:

- Ensure the water tank is stoppered before turning on.
- Do not touch the power cord or socket with wet hands.

# OPERATION

- When the appliance is ready to produce steam, the indicator will illuminate green. This usually takes approximately 5-6 minutes, depending on how much water has been filled.
- Depress the child lock while pressing the steam trigger: a small amount of water will be produced first before steam.
- If the indicator illuminates red, it indicates the appliance is low on water.
- If refilling, allow the appliance to cool for 20 minutes before opening the safety valve. To open, push down and turn anticlockwise.

## Extension tube

- For cleaning the floor, high windows or inaccessible areas.
- Push the open end of the tube onto the steam gun until the release button of the steam gun clicks into place. Press the release button and pull to remove.

## Nozzle

For cleaning hard-to-reach areas such as corners, joints and toilets, simply push the nozzle firmly into the gun directly.

## Round Brush

- For dealing with stubborn dirt on blinds, radiators, etc. The nylon brush is suitable for heavier stains on less sensitive materials such as stainless steel.
- Insert nylon and metal brushes firmly into the nozzle.
- To remove, push down and remove it directly.

## Ironing Brush

- For ironing chairs, couches, beds etc.
- Place the white ironing cloth on the ironing brush and connect to the steam gun. Use the steam gun to apply a small amount of steam.

## **Window Brush**


- To clean window, mirrors or tiles or objects with a smooth surface.
- Apply a very small amount of steam when cleaning and use a clean towel to absorb water.
- Push firmly into the steam gun and it will click into place.



# CLEANING & CARE

- Turn off after each use.
- If there is water remaining, open the safety valve until it has cooled and drain water.
- Use a dry cloth to gently wipe the body surface.
- Do not spray the machine with water.
- Store in a dark, dry area, do not store in a damp area as the electronics may be damaged by moisture.

# TROUBLESHOOTING

Issue	Steps to Resolve
No steam	<ul style="list-style-type: none"><li>• Check power supply</li><li>• Turn on the power switch</li><li>• Ensure appliance has sufficient water</li><li>• Check child lock is not activated</li></ul>
Water flowing from nozzle	This should stop shortly and is expected: if it persists and affects product usage, contact <a href="http://Kogan.com">Kogan.com</a> Support
Steam escaping from safety valve or other outlet besides nozzle	Contact <a href="http://Kogan.com">Kogan.com</a> Support
Handle heating up	<p>Replace O-ring (2 spares supplied with product, see image below)</p>  <p>The diagram illustrates the process of replacing an O-ring on the handle assembly. It shows a close-up of the O-ring being replaced, a full view of the handle assembly with the O-ring highlighted, and a full view of the handle with the O-ring highlighted.</p>



### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **[help.kogan.com](https://help.kogan.com)**

**kogan.com**