



CORDLESS 22.2V VACUUM CLEANER WITH UV SANITISER

KAVACUV22CA

SAFETY & WARNINGS

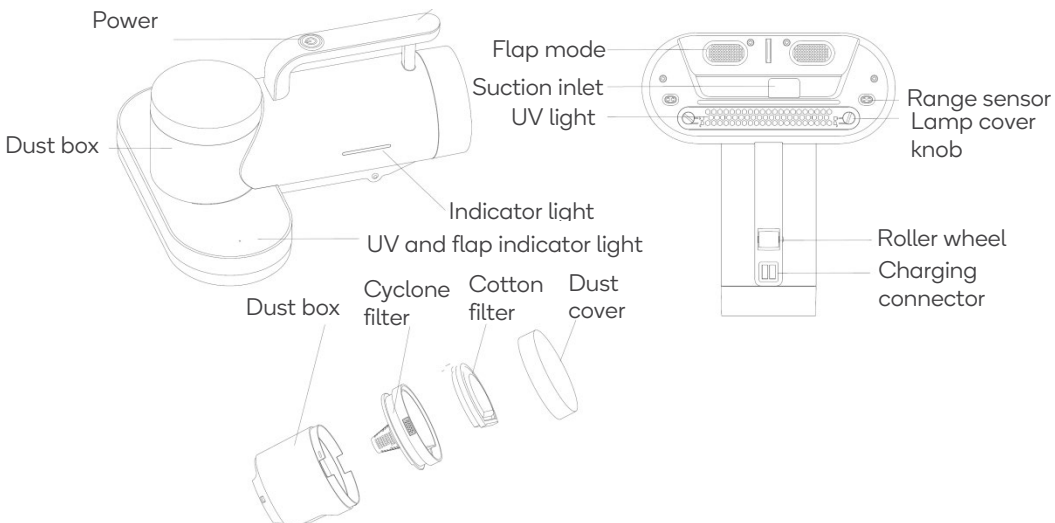
- Read all instructions fully before using the product for the first time and retain them for reference. If passing this product on to a new owner, include a copy of this guide.
- Any operation that does not comply with the instructions of the manual may result in serious personal injury, property damage or damage to the product itself.
- This product is intended for household use. Do not use it to suck up metal particles or construction waste. This product is not intended for use by people who have no experience and knowledge of bed mites, including children, unless they are supervised and responsible for their safety.
- Do not stand or sit on this product.
- Keep this product in a safe place out of reach of children. Do not store the unit in a high place to avoid the risk of accidental falls.
- This product is not intended for use by persons with physical, sensory, or intellectual disabilities or those who lack experience and common sense (including children) unless they are supervised or directed to ensure that they are safe to use.
- This product is only suitable for working in a dry environment. Do not use it in a humid environment.
- This product is not waterproof. Do not use it to vacuum water or damp dust.
- Do not vacuum high-temperature substances (cigarettes, matches or hot ash), ultra-fine materials (such as lime, cement, wood chips, gypsum powder, ash, toner, etc.), sharp objects (such as glass, nails, pins, etc.), dangerous goods (such as solvents, detergents, etc.), chemicals (such as acidic substance, detergents, etc.) or flammable or explosive liquids (gasoline, alcohol products).
- Keep the suction area and moving parts away from hair, loose clothing, fingers, and other body parts, especially eyes and ears.
- Ensure the area is clear before use. If you find paper, paper balls, plastic cloth or sharp objects and things that are thicker than the straw diameter, remove this debris to avoid damage to the product.
- If the unit is leaking or the motor temperature is too high and abnormal sounds are heard, discontinue use immediately and contact Kogan.com
- Ensure to check and empty the dust cup regularly to keep the ventilation hole unobstructed, which avoids blockages and loss of suction.
- Do not use lubricants, detergents, polishes, etc., to clean the unit
- Do not attempt to repair or modify the unit. Contact Kogan.com in the event of a fault.
- This product is a power tool; never allow it to operate unattended.
- Keep the appliance away from heat sources or fire.

- Do not disassemble the dust cup, the UV lamp cover or open the air hood when the machine is powered or running to avoid injury or machine damage.
- Only use the original power adaptor included with the product.

Ultraviolet safety precautions

- This product is equipped with an ultraviolet sterilising lamp; avoid looking at the bottom of the machine when the power is on and the ultraviolet sterilising function is enabled to prevent personal injury.
- Avoid exposing animals and plants to ultraviolet rays.
- Do not concentrate UV rays in one place for an extended period, as this may cause damage to surfaces.
- Do not point the ultraviolet lamp at the skin or eyes.
- Avoid exposing the photosensitive components at the bottom of the machine to strong direct light during operation, as this may lessen performance and present the risk of failure.
- Clean the surface of the sensor probe with a clean cloth to prevent dust build-up and ensure proper operation.

OVERVIEW



OPERATION

ATTENTION: Before assembling the product, please check the accessories list below and confirm that all parts have been received.

Before use

- Ensure the components of the UV vacuum cleaner are assembled in place.
- Check whether the power is sufficient to ensure the product works normally.

Charging instructions

- Plug the adapter into the charging base and the other end into the power socket.
- Do not operate the appliance whilst charging.
- The power indicator light is fully charged when all three lights are illuminated.

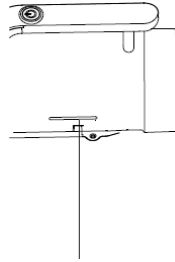


The power indicator flashes in turn when charging

- Put the machine into the charging base and the power indicator will flash to indicate charging is in progress.
- Charge the battery fully when you use a new battery, before first use or after long-term storage.
- Charge for more than 3 hours before the first use.

Indicator light

Press the power button, and once all three lights are illuminated, the machine is ready to operate. Press the power button again to power the unit off.

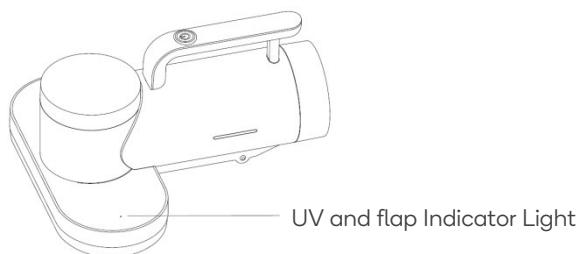


- 3 lights 100%
- 2 lights 65%
- 1 light 30%
- 1 light to flash, need to be charged

ATTENTION: To avoid accidental pet injury, the UV lamp is equipped with an infrared sensor safety switch. The UV lamp will automatically disable until it is in contact with the surface to be cleaned.

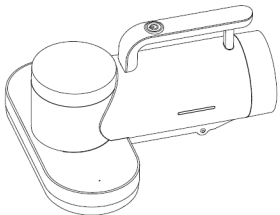
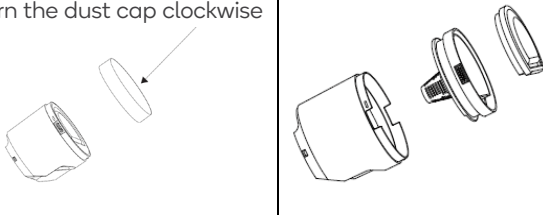
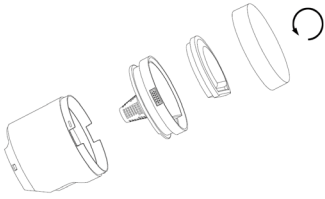
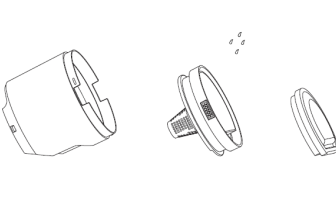
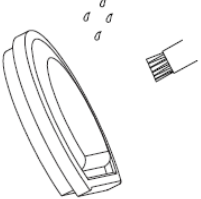
UV and flap Instructions

When the machine touches the object surface, the infrared sensor detects the object. When the UV light is on, the flap will engage. When the machine is removed from the surface and the infrared sensor cannot detect the surface, the UV light and flap will both disable.

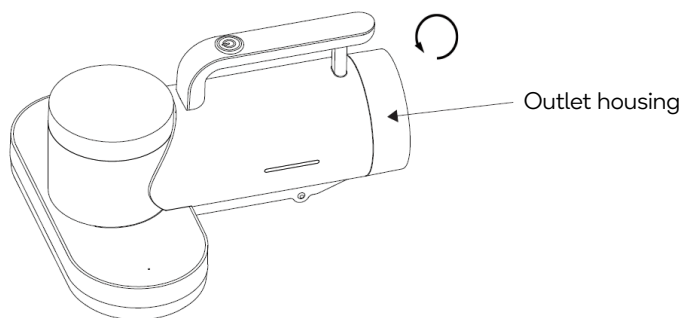


CLEANING & CARE

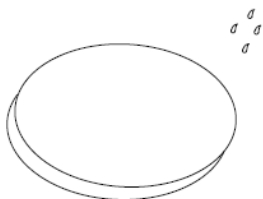
Cleaning the dust box

	Turn the dust cap clockwise	
Remove the dust box	Separate the dust box	Clean the dust box with a brush
		
Turn the dust cap clockwise and remove the cyclone filter	Wash the cyclone filter	Clean the cotton filter with a brush or wash

Exhaust filter



Twist the outlet housing clockwise



Remove the exhaust filter and wash

ATTENTION: Washable parts can only be reinstalled into the appliance once they have dried completely.

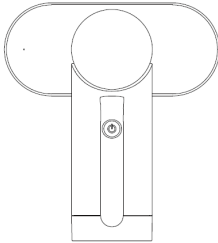
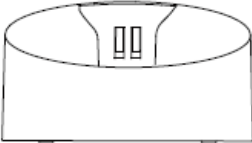
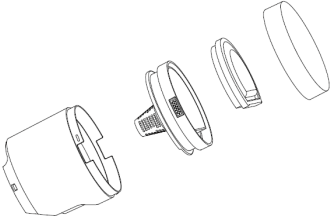
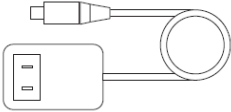


Daily storage

- When not using the machine for a long time, store in a cool and dry place. Do not place the machine in direct sunlight or a moist environment.
- When you do not use the machine for a long time, make sure to charge and discharge the battery at least once every three months.

SPECIFICATIONS

Voltage	21.6V
Power	100W
Max Power	120W
Capacity	≥0.5L
UV lamp power	6W
Net weight	1.5kg
Charging time	4.5h
Adapter voltage input	100-240V~ 50/60Hz
Adapter voltage output	DC 26V 0.5A
Working time	Approx. 25min
Battery capacity	2200mAh

IN THE BOX

		
Main unit	Charging base	Dust cup (pre-assembled)
		
Power adaptor	User Guide	Brush

TROUBLESHOOTING

Details	Possible cause	Solution
Machine will not power on	Low battery	Charge the battery
	Power switch has not been pressed	Press the power switch
Insufficient suction	The suction inlet of the machine is blocked	Clean the suction inlet
UV light does not work	Object surface is not smooth, or the machine bottom does not fully touch the object, so the safety feature is enabled	Keep the surface flat or the machine bottom the full contact with the surface to be cleaned
	Lamp tube damaged	Replace the lamp tube
Excessive noise	<ul style="list-style-type: none">• Full dust cup• The suction inlet is blocked• The dust cup filter is blocked	Discontinue use and clean out the blockage
	No filtering component is installed	Install the filter component

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan